


4Mix V2 FIELD MIXER - TRIMMER & FUSE LOCATION DIAGRAM

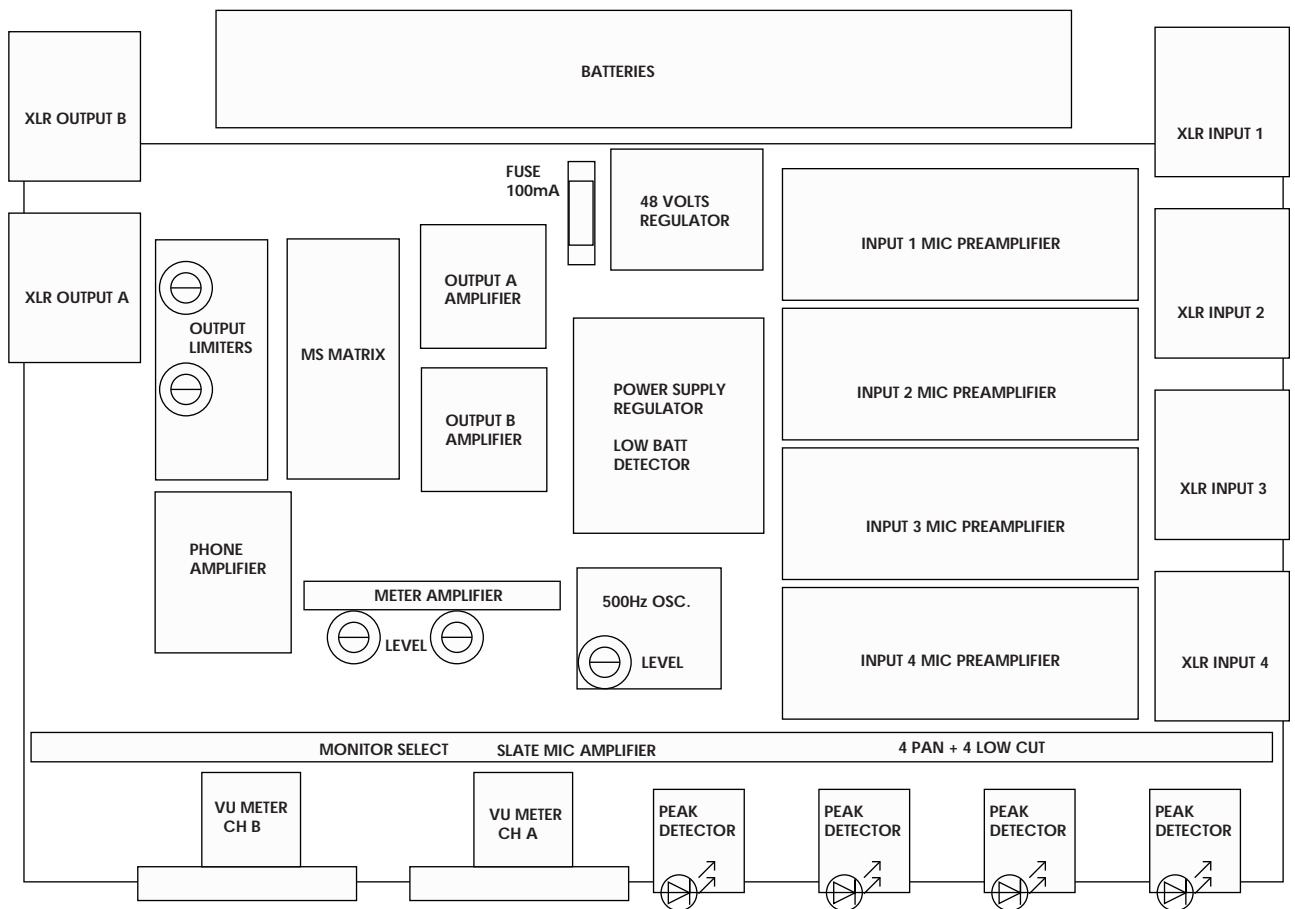

POTENTIOMETERS :

Channel level 1, 3, 4 : ALPS RK09711503
 Channel level 2 : ALPS STRK09711503
 Master volume : ALPS STRK09711104
 Phones level : ALPS STRK09707103
 Pan all channels : ALPS RK09RR111103 or SPECTROL M248

CONNECTORS :

Inputs : NEUTRIK NC3FAV1
 Outputs : NEUTRIK NC3MAV

METERS :

Componex C360VU, 36mm

SERVICE :

In the unlikely event your 4Mix requires service it should be carefully packed and shipped prepaid to:
 CEVL Service Department
 42 rue de la République, 37230 Fondettes France
 tel : +33 247 49 70 92 fax : +33 247 49 70 91
 Please call before shipping your mixer. We may be able to solve your problem via the phone.
 We are always willing to help you with your 4Mix questions.

All adjustments are factory calibrated and should not be adjusted without proper measurement equipment.

CONNECTOR PIN ASSIGNMENTS:

XLR-3 inputs & XLR-3 outputs
 PIN 1 Ground
 PIN 2 Audio High
 PIN 3 Audio Low

Aux, Phones outputs & Return jacks :

Tip = Left (A)
 Ring = Right (B)
 Sleeve = Ground

VARISTAGE boom remote control: 3.5mm jack

Tip = Left (A) resistance
 Ring = Right (B) resistance
 Sleeve = resistance return

Multi-pin SubD9 (Betasnake):

PIN 1 external +18V regulated power supply input
 PIN 2 Right Tape Return
 PIN 3 Left Audio High
 PIN 4 Right Audio High
 PIN 5 Ground
 PIN 6 Left Tape Return
 PIN 7 Tape Ground
 PIN 8 Left Audio Low
 PIN 9 Right Audio Low